




**Parts:**  
 Grill  
 Easel  
 Logo sign  
 3 Sided supports (2)  
 2 Sided supports (2)

Light support  
 Boiler  
 Smoke stack  
 Train back  
 Train front  
 Bolts (10)




1  
 Fold *Easel* and lock die wings down.

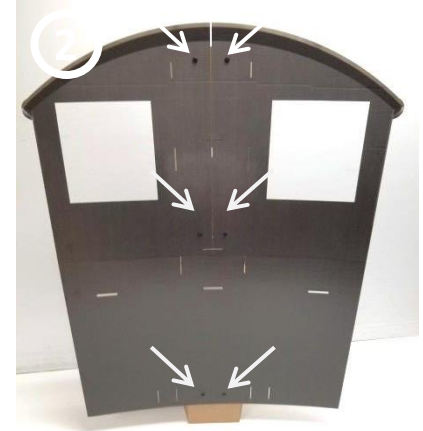



2  
 Use 6 *Bolts* to attach the *Train back* to the *Easel*.  
**NOTE:** *Easel* will not stand on own.




3  
 Take 2 *Sided Supports* (2) and using 2 *Bolts*, fasten them to the back side of *Train front* (3 & a). Slide 2 *Sided support* tabs into *Train back* in 4 places (b).

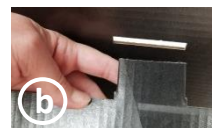

The *Train front* top has 3 tabs that lock into the *Train back*. Fold in the tab sides (a & b). push thru slot on *Train back* and unfold tab sides (c).

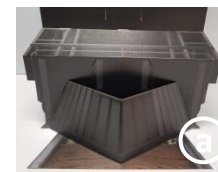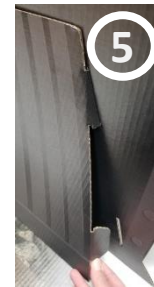

5  
 Lock *Grill* tabs into *Train front* slots in 4 places.

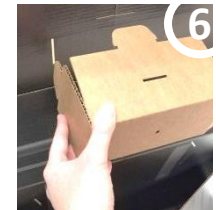

6  
 Lock both 3 *Sided supports* to *Train back* using tabs and slots.



Using 2 Bolts fasten *Boiler* to top and bottom of 3 Sided supports.



*Smoke stack* 2 side tabs lock into *Train back*. The *Smoke stack* bottom tab locks into the 3 Sided Support in one place.



Fold back the long tabs of the *Logo sign* (9). Lock tabs into slots of *Train front*.



## ASSEMBLED ROCKY RAILWAY TRAIN DISPLAY

### OPTIONAL LIGHT



**OPTIONAL PIECE:** Take *Light support* and fold around light (a & b). Fold side flaps on tabs and lock into *Light support* (c, d & e). Light fixture fits behind *Smoke stack* (f).



## ASSEMBLED ROCKY RAILWAY TRAIN DISPLAY WITH OPTIONAL LIGHT